



SPYDER

WWW.SPYDERAUTO.COM

INSTALLATION GUIDE:

PRO-YD-NA02-(ALL COLORS)

Tools Required


Flathead Screwdriver

Phillips Head Screwdriver

10mm Socket Wrench/Ratchet

Please Note

If you are unfamiliar with the installation processes, professional installation is highly recommended.

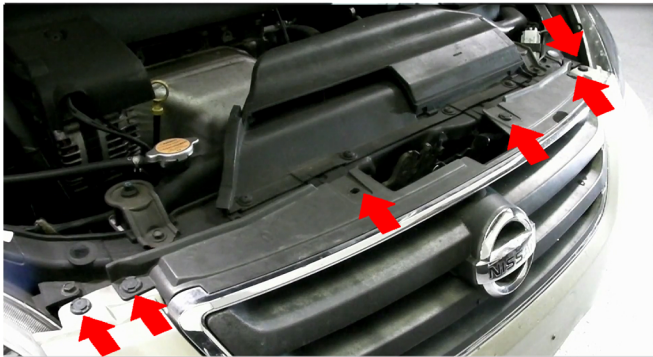


1) Remove [6x] Plastic Retainers.



2) Move to the wheel well. Remove [1x] Phillips Head Screw & [1x] 10mm Bolt securing the fender to the bumper fascia.




3) Remove [4x] 10mm Bolts Securing Underside of Bumper Fascia to body. (Bumper removed for illustration purposes)

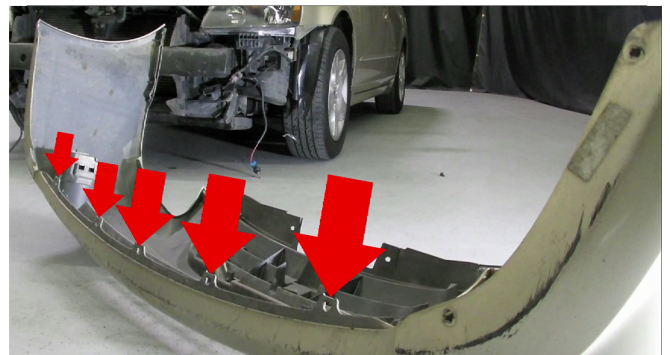


4) Remove [5x] Plastic Retainers securing bumper fascia to body. (Bumper removed for illustration purposes)



5) Remove the fog light bulb sockets or disconnect the fog light harness [if equipped]. (Bumper removed for illustration purposes)

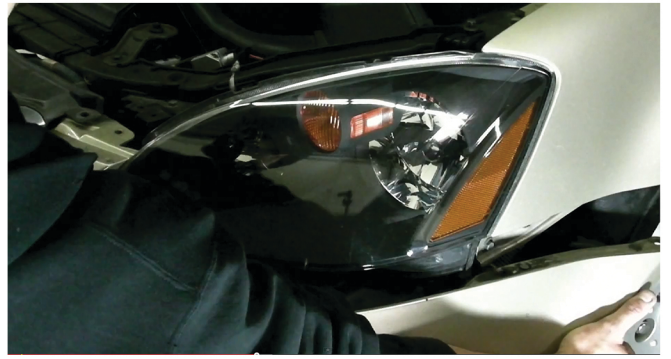

6) Remove the bumper fascia and set it aside.

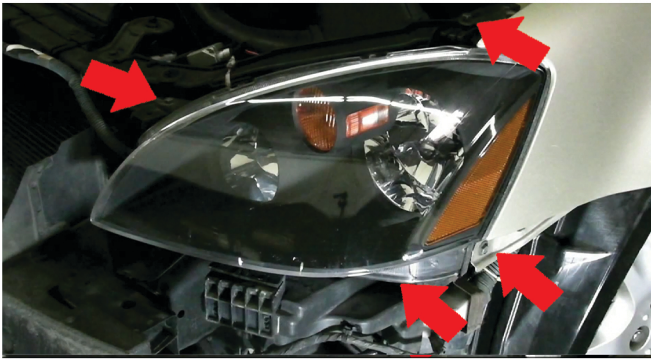

7) Remove [4x] 10mm Bolts securing headlight.



8) Unseat the OEM headlight.



9) Disconnect the headlight by removing all bulb sockets from the OEM headlight, then remove the OEM headlight assembly and set it aside.



10) Install all bulb sockets into the new SPYDER headlight, then seat the SPYDER headlight after connecting it to the wiring harness.



11) Install [4x] 10mm Bolts to mount and secure SPYDER headlight.




12) Re-Seat the front bumper fascia.



13) Move to the wheel well. Reinstall [1x] Phillips Head Screw and [1x] 10mm bolt securing bumper fascia to fender.



14) Reinstall [4x] 10mm Bolts securing the under side of the bumper fascia to the body. (Bumper shown removed for illustration purposes)

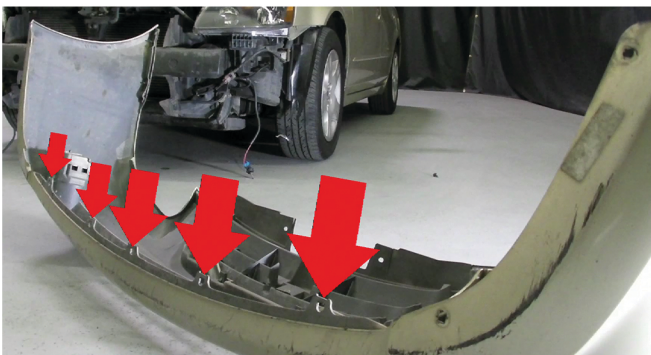

15) Reinstall [5x] Plastic Retainers securing under side of bumper fascia to the body. (Bumper shown removed for illustration purposes)



16) Reinstall [6x] Plastic Retainers along grille/upper edge of bumper fascia.



SPYDER
WWW.SPYDERAUTO.COM

For further help with installation, please watch our installation video. Follow the direct link below to our YouTube channel for more information.
<http://www.youtube.com/watch?v=LFisZWWDcCA>

Disclaimer

Spyder Auto Installation Guide is not liable for damages, injuries, and death while installing the product. This is intended to be an installation guide, to cut down installation time for you. We have no responsibility for improper installation, if you do not know how to install, please have a professional install it.