



# SPYDER

WWW.SPYDERAUTO.COM

## INSTALLATION GUIDE: PRO-YD-TCAM07-DRL-(ALL COLORS)

### Tools Required

10mm Socket & Ratchet

Panel Popper

Phillips Screwdriver

\*Please Note\*

If you are unfamiliar with the installation processes,  
professional installation is highly recommended.



1) Open the hood. Remove [2x] phillips screws.



2) Remove [1x] 10mm bolt securing the front bumper fascia.



3) Remove [6x] 10mm bolts securing the bottom of the fascia. There are [3x] bolts per side.



4) Remove [1x] plastic retainer from the fender liner.



5) Remove [1x] 10mm bolt securing the fascia to the fender.



6) Pull upwards and away from the car to unseat the front bumper fascia.




7) Disconnect the foglight wiring harness, then remove the fascia and set it aside.



8) Remove [3x] 10mm bolts securing the headlight.




9) Release the mounting tabs to unseat the headlight.

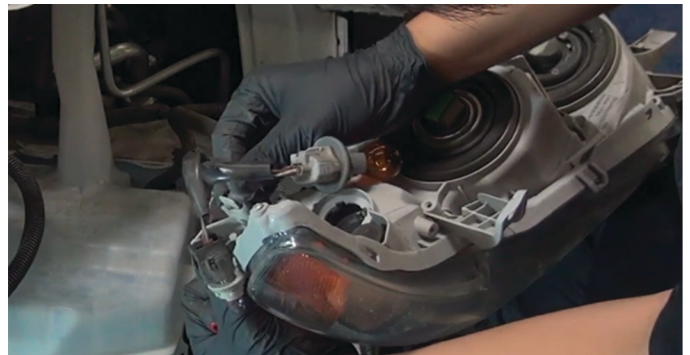

10) Remove the sidemarker and turn signal sockets from the headlight. Never touch exposed bulbs with bare hands.




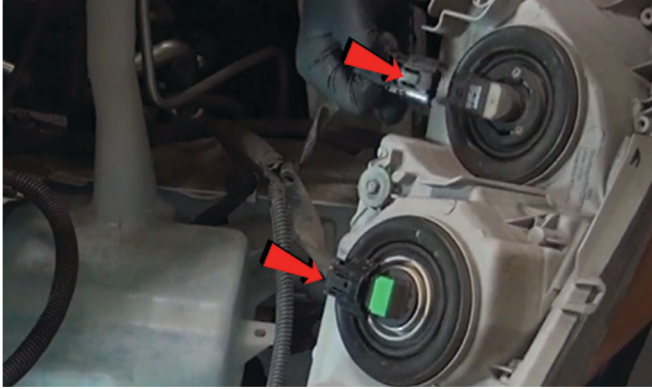

11) Disconnect the high beam and low beam harnesses. Remove the retainer clip securing the harness to the OEM headlight, then remove the OEM headlight.




12) Locate the Spyder headlight.

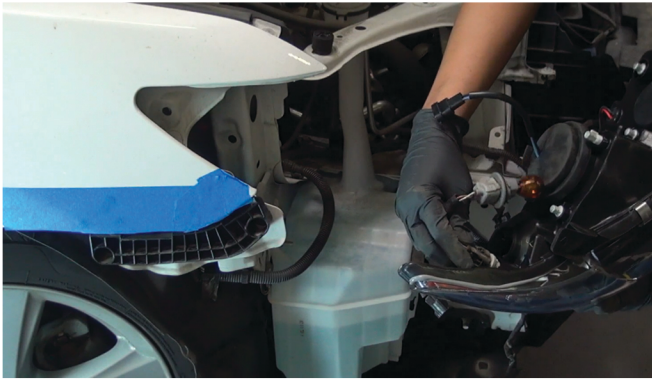

13) Reinstall the sidemarker socket into the Spyder headlight.



14) Reinstall the turn signal socket into the Spyder headlight.

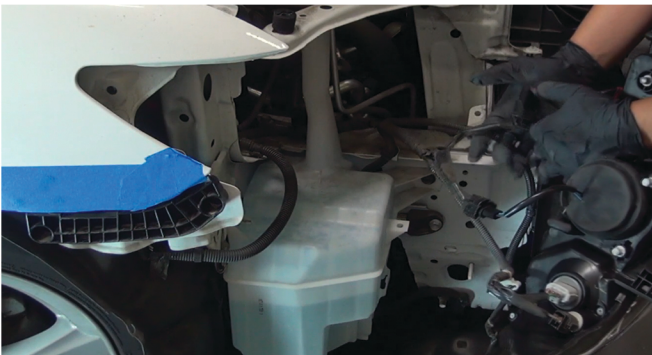


15) Connect the high beam harness and low beam harness to the Spyder headlight.




16) Seat the Spyder headlight, being sure to snap the mounting tabs fully into place.



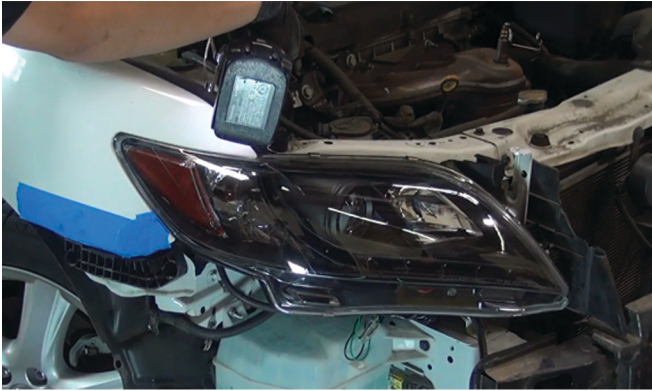

17) Reinstall [3x] 10mm bolts to secure the headlight.

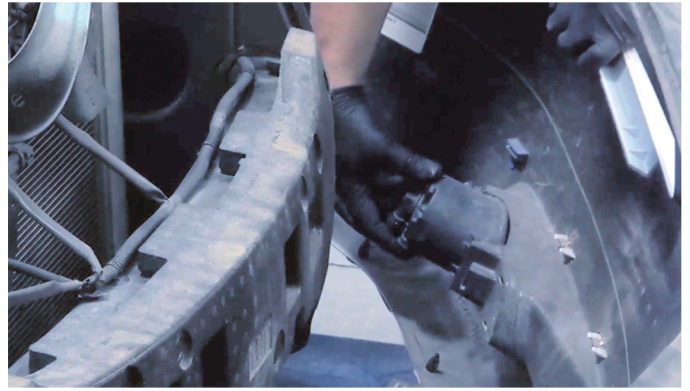

18) Reconnect the fog light harness.



19) Remove the low beam bulb from the OEM headlight. Remove the bulb from the carrier. Never touch exposed bulbs with bare hands.



20) Reinstall [2x] phillips screws to secure the fascia.



21) Reinstall [1x] 10mm bolt to secure the fascia.



22) Reinstall [1x] 10mm bolt at the corner of the fascia to secure it.





23) Seat the fender liner, then reinstall [1x] plastic retainer to secure the liner.



24) Reinstall [6x] 10mm bolts to secure the fascia to the undertray.



25) Close the hood and enjoy your new LED DRL projector headlights from Spyder Auto.





**SPYDER**  
WWW.SPYDERAUTO.COM

For further help with installation, please watch our installation video. Follow the direct link below to our YouTube channel for more information.

<http://www.youtube.com/watch?v=OHF-yDxU-u4>

## Disclaimer

Spyder Auto Installation Guide is not liable for damages, injuries, and death while installing the product. This is a guide only, designed to save you time during the installation process. We take no responsibility and cannot be held liable for improper installation. If you do not know how to install your product or are not comfortable doing it yourself, please seek professional installation.