



# SPYDER

WWW.SPYDERAUTO.COM

## INSTALLATION GUIDE:

ALT-YD-CD00-(ALL COLORS)

### Tools Required

Phillips Screwdriver



**\*Please Note\***


If you are unfamiliar with the installation processes, professional installation is highly recommended.




1) Open the tailgate.




2) Remove [2x] phillips screws securing the tail light.

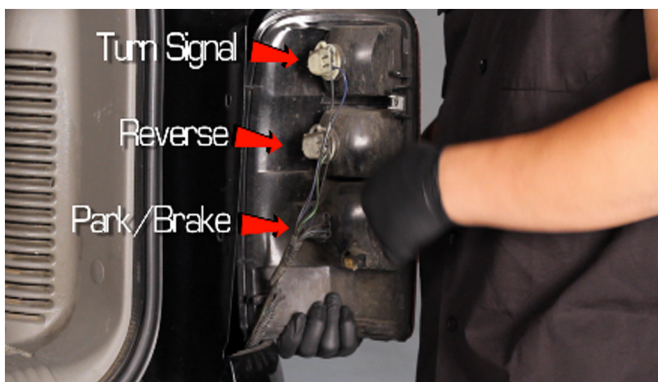

3) Unseat the tail light.

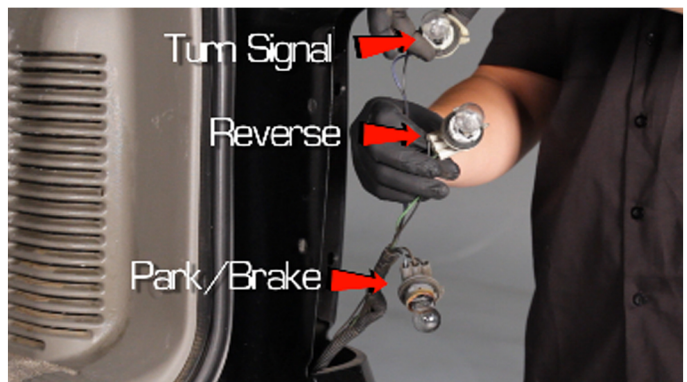

4) Remove the bulb sockets from the OEM tail light. Remove the turn signal and park/brake lamp bulbs from their sockets. Never touch exposed bulbs with bare hands.

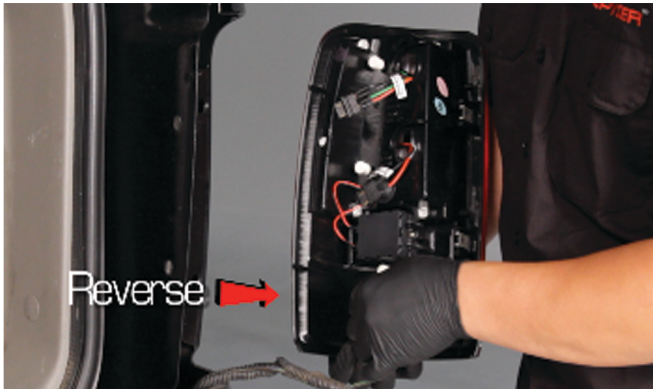

5) Reinstall the reverse lamp socket into the bottom position of the Spyder tail light.



6) Install the center-position socket insert into the turn signal socket. Align the black wire side of the insert with the black wire side of the socket to ensure correct polarity. Then reinstall the turn signal socket into the center position of the Spyder tail light.



7) Install the top position socket insert into the park/brake lamp socket. Then reinstall the park/brake lamp socket into the top position of the Spyder tail light.



8) Seat the Spyder tail light.



9) Reinstall [2x] phillips screws to secure the tail light.



10) Close the tailgate and enjoy your new LED tail lights from Spyder Auto.



**SPYDER**  
WWW.SPYDERAUTO.COM

For further help with installation, please watch our installation video. Follow the direct link below to our YouTube channel for more information.

[http://youtu.be/Yp\\_GuqZXb6M](http://youtu.be/Yp_GuqZXb6M)

## Disclaimer

Spyder Auto Installation Guide is not liable for damages, injuries, and death while installing the product. This is a guide only, designed to save you time during the installation process. We take no responsibility and cannot be held liable for improper installation. If you do not know how to install your product or are not comfortable doing it yourself, please seek professional installation.