



# SPYDER


WWW.SPYDERAUTO.COM

## INSTALLATION GUIDE:

ALT-YD-CS07-LED-(ALL COLORS)

### Tools Required

Phillips Screwdriver




#### **\*Please Note\***

If you are unfamiliar with the installation processes, professional installation is highly recommended.



1) Open the tailgate. Remove the two Phillips head screws securing the tail light.

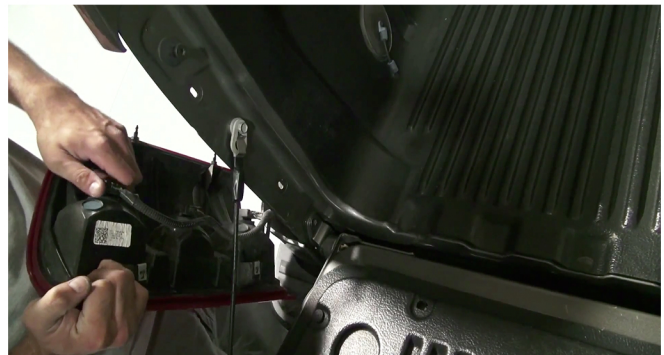


2) Unseat the tail light. Remove all three bulb sockets from the OEM tail light housing and set it aside.



3) Remove the bulb from bottom socket of the tail light harness. Tuck the socket away behind the bumper, as it is not used.



4) Remove the bulb from the uppermost socket. This is one of the brake lamp sockets. Connect the SPYDER taillight's bulb socket insert harness into the empty brake lamp socket, being sure to align the black wire on the SPYDER side with the black wire on the OEM side of the taillight harness. Failure to match up ground wires can void your warranty.

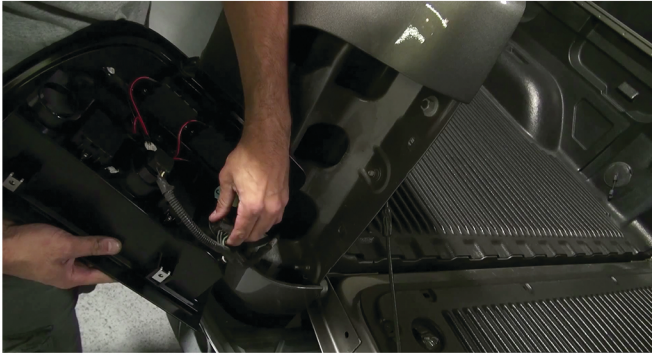

5) Reinstall the brake lamp bulb socket into the SPYDER taillight housing. Be sure to install the reverse lamp socket.



6) Seat the SPYDER tail light.



7) Reinstall the two phillips head screws that secure the tail lights.



8) Enjoy your SPYDER LED tail lights.



**SPYDER**  
WWW.SPYDERAUTO.COM

For further help with installation, please watch our installation video. Follow the direct link below to our YouTube channel for more information.

<http://www.youtube.com/watch?v=sYeSC5EbpPs>

## Disclaimer

Spyder Auto Installation Guide is not liable for damages, injuries, and death while installing the product. This is intended to be an installation guide, to cut down installation time for you. We have no responsibility for improper installation, if you do not know how to install, please have a professional install it.