



SPYDER


WWW.SPYDERAUTO.COM

INSTALLATION GUIDE:

ALT-YD-LIS300-LED (ALL COLORS)

Tools Required

10mm Socket w/ Ratchet

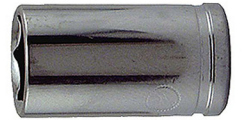

Please Note


If you are unfamiliar with the installation processes, professional installation is highly recommended.



1) Open your trunk and locate the (2) 10mm bolts that hold the taillight in place. Using the 10mm socket, remove these bolts.



2) Once the bolts have been removed, you can remove the tail light. Once you have the wiring harness exposed, twist the 3 bulbs and sockets from the tail light.

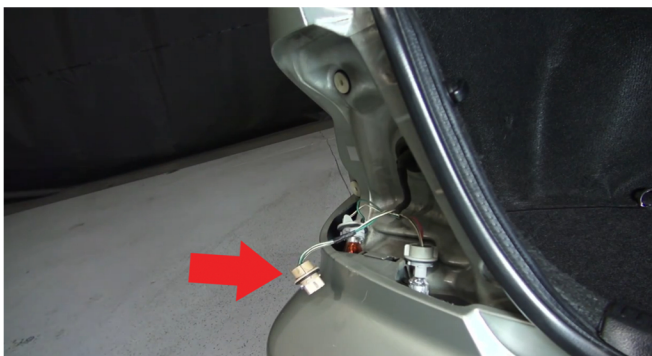

3) Next, locate the brake light bulb and gently pull it out of its socket. You can keep this bulb with your old tail lights if ever needed again.



4) Shown here you will need to connect the new LED clip into the bulb socket of your vehicles tail light harness. Be sure to line up the Black ground wires from the LED clip with the White and Black wire from the vehicles harness to prevent from blowing any fuses.



5) Next, simply insert the sockets in to the tail light housing, placing the bulbs in there designated housings. Twist the sockets to secure them in place.



6) Final step, reseal the tail light lining the plastic pin on the back of the tail light with the mount hole on the vehicle frame. The mounting holes should line up with the bolt holes. Replace the (2) 10mm bolts to secure the tail light in place and you are done.



Congratulations on completing the installation of your new Spyder tail lights for the 01-05 Lexus IS 300.



SPYDER
WWW.SPYDERAUTO.COM

For further help with installation, please watch our installation video. Follow the direct link below to our YouTube channel for more information.
<https://www.youtube.com/watch?v=8gQXidwmRXo>

Disclaimer

Spyder Auto Installation Guide is not liable for damages, injuries, and death while installing the product. This is intended to be an installation guide, to cut down installation time for you. We have no responsibility for improper installation, if you do not know how to install, please have a professional install it.