



# SPYDER


WWW.SPYDERAUTO.COM

## INSTALLATION GUIDE: ALT-YD-SFRS12-LBLED-(ALL COLORS)

### Tools Required

8mm Socket & Ratchet

Panel Popper

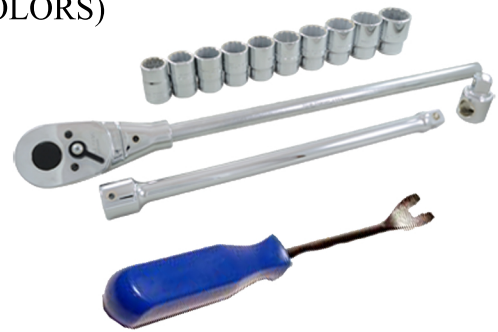


*\*Please Note\**


If you are unfamiliar with the installation processes,  
professional installation is highly recommended.



1) Open the hood.

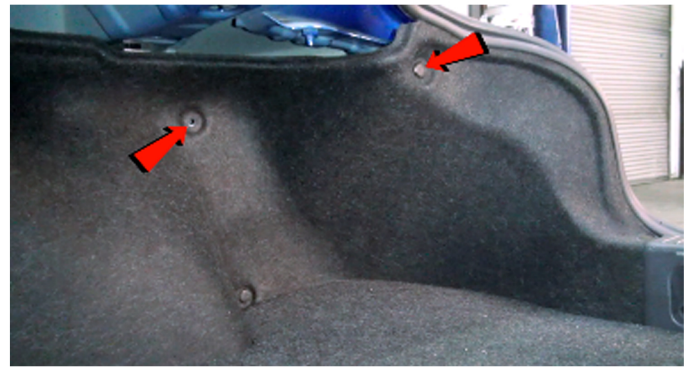

2) Remove [2x] plastic retainers securing the trunk liner. Then peel back the trunk liner for access.

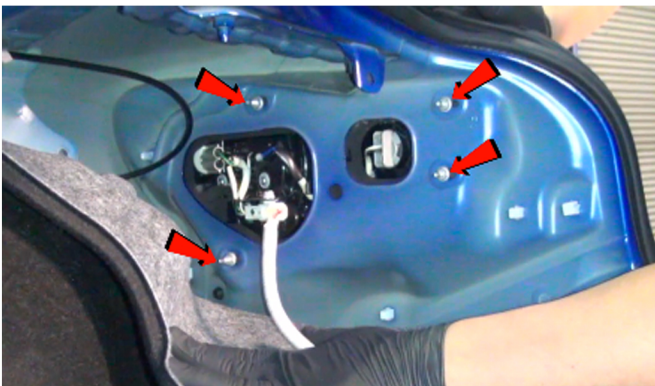


3) Remove [4x] 8mm bolts securing the tail light.



4) Remove the tail light wiring harness retainer from the stud.



5) Unseat the tail light.

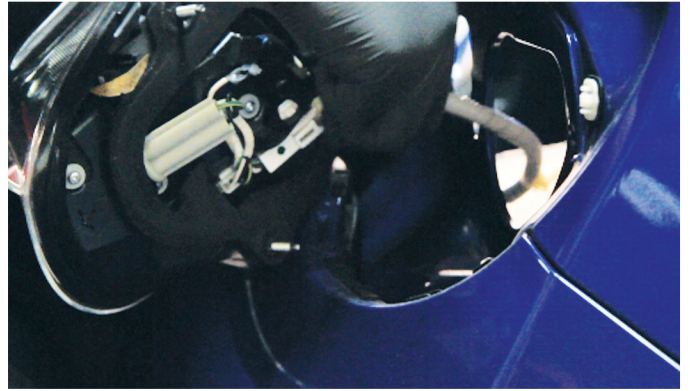


6) Disconnect the tail light wiring harness.




7) Connect the Spyder tail light to the wiring harness.




8) Seat the Spyder tail light, taking care not to pinch the harness between the tail light and body.

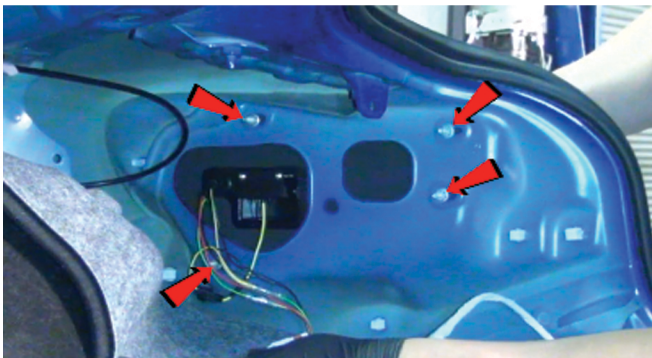

9) Reinstall [4x] 8mm nuts to secure the tail light.

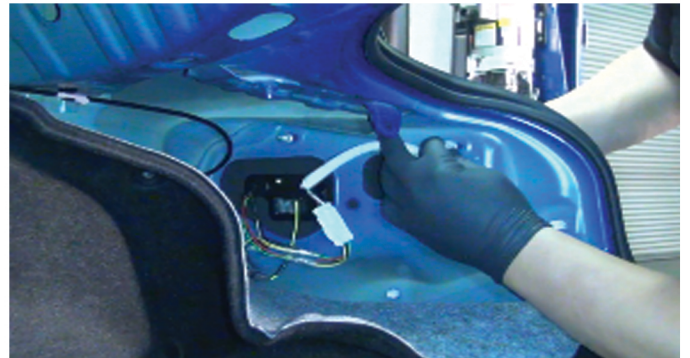

10) Reinstall the tail light wiring harness retainer.

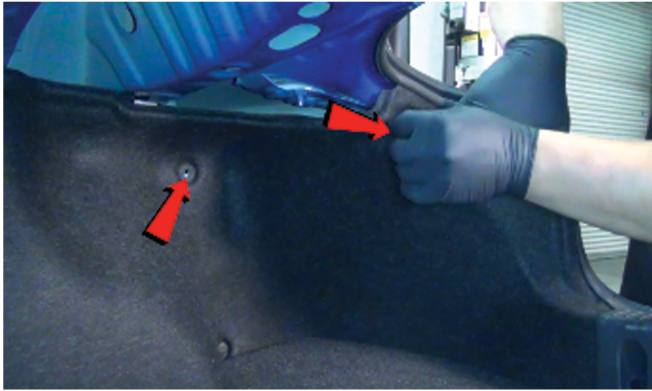

11) Reinstall [2x] plastic retainers to secure the trunk liner.



12) Close the trunk and enjoy your new Spyder LED tail lights.



**SPYDER**  
WWW.SPYDERAUTO.COM

For further help with installation, please watch our installation video. Follow the direct link below to our YouTube channel for more information.

<http://youtu.be/d3pEOgti02Y>

## Disclaimer

Spyder Auto Installation Guide is not liable for damages, injuries, and death while installing the product. This is a guide only, designed to save you time during the installation process. We take no responsibility and cannot be held liable for improper installation. If you do not know how to install your product or are not comfortable doing it yourself, please seek professional installation.